

Operation with EMU-DCS in Green Barrack.

Usage of the “phase2” manuals:

1) case of the whole Green Barrack power cut

Preferred order of manuals usage:

- 1.1) DCS_MTCC_PHASE2_CONTROL.doc
- 1.2) DCS_MTCC_PHASE2_PVSS.doc

2) case of the machine emudcs reboot

Please follow the document:

DCS_MTCC_PHASE2_PVSS.doc

3) case of the only LV Windows machine (pcmsad02) reboot

(may happen especially due to Windows patches automatic installation)

The case does not affect the LV status of Maratons and CRBs.

You may detect this reboot by the fact the marathons are uncontrollable.

You may also detect this reboot by the ERROR in the CSC_LV node and

“DEVICE IS NOT CONNECTED” warning on the maratons panels.

please, follow the document

DCS_MTCC_PHASE2_CONTROL.doc **(only section 1.5)**

Note: you do not need to follow the 1.2-1.4 of the DCS_MTCC_PHASE2_CONTROL
if the HV control machine is not rebooted.

4) case of the only HV control machine (ufcmshv1) reboot

It should not normally happen. It affects the HV status.

You may detect this reboot by bad data (DAQ data)

You may also detect this reboot by the ERROR in the CSC_HV node and

“DEVICE IS NOT CONNECTED” warning on the primary supply panels.

Use any X-terminal to follow the 1.4 of the DCS_MTCC_PHASE2_CONTROL

=== Theoretically possible SPECIAL CASES DURING THE NORMAL OPERATION =====

5) case: the HV is uncontrollable and the HV control machine is OK (not after reboot)

Check the hardware is OK: LV power supply of HV system status (otherwise call Peter 160537)

Use any X-terminal to follow the 1.4 of the DCS_MTCC_PHASE2_CONTROL

6) case: marathons are not controllable and the LV machine pcmsad02 is not after reboot (the case does not affect the LV status of Maratons)

Check the hardware is OK: AC-DC converters statuses (otherwise call Peter, 160537)

Check the MARATON.exe is running on pcmsad02. If it is not so use the 1.5 (a)
of the DCS_MTCC_PHASE2_CONTROL to start it.

7) case: no communications to Peripheral Crates

Check the hardware is OK: LV power supply of PCMBs (otherwise call Peter, 160537)

Check the CRB.exe is running on pcmsad02. If it is not so use the 1.5 (b)
of the DCS_MTCC_PHASE2_CONTROL to start it.