Operation with EMU-DCS in Green Barrack.

Starting the CMS_CSC project:

On the "emudcs" machine console go to DCS screen and open a new terminal and log in as follows:

su – fast (please do not forget the "-") User: fast Pass: UFdqm_04

Issue the command: DCS To start the VNC server

Click the small Icon in the middle of the desktop top border. If you see a new desktop opened please skip the bold line right below: If a new desktop is not opened, please proceed with DCS command again.

shortly after start you will see two popped- up grey windows (like in **fig.1**). Please close both of them by clicking the "Close" buttons

	ine close buildns	
MYDEB	export DIM_DNS_NODE=ufcmspc02;/home/fast/pvss_fsm/bin/P -num 5 -dim_dp_config _DimClient_5 -dim_dns_node ufcmspc02 & Close	Fig.1
Now wait un "START IS YOU CAN MYDEB	ntil the grey window COMPLETE OPERATE" (fig.2) is displayed (in ~ 5 m NUG START IS COMPLETE YOU CAN OPERATE Close	inutes !!!) Fig.2

Click "Close" button to close the "YOU CAN OPERATE" window

Identify the window "Device Editor & Navigator" (fig.3)



Click "Start/Restart All" and wait until the new popped up window (Make sure you already got the fig.2 display before to do that) "Please wait – All Domains Starting Up ..." is closed Click the +CMS_CSC so that the +CMS_CSC is highlighted like shown in fig.5



Select the "View" and click on it to display the window shown in fig.7a

	System	State		04/07/2	006 18:03:33		
CERN	CMS_CSC	ON		root		Fig.7a	
Sub-System	State					8	
CSC_GAS	ON						
CSC_LV	ERROR	8					
CSC_HV	ON	3					
CSC_WTH	ON	1					
CSC_ME_P1	OFF	<u></u>					
CSC_ME_P2	OFF	<u>-</u>					
CSC_ME_P3	OFF	<u>_</u>					
CSC_ME_P4	ERROR	<u>_</u>				050 MT00	
Messages						Is Excluded	
							Eie 7h
					Close	Take	r1g./D
/	/						
Click "Lock"	icon to display th	e "Modes" v	vind ow like	shown in	fig.7b		
Click "Take"	button		· inte o it inte			/	

Click "Take" button —

And wait the "Modes" window to disappear. Close all popped-up windows (if any) with "Close" button. (that my take up to ~ 2 minutes! Do not click the window Fig.7a while the "Modes" is displayed!) When the "Modes" window is disappeared wait for more 2 minutes.

You will see a display like shown in **fig8**:

	System	State		15/10/2006	6 17:56:47	
CÉRN	CMS_CSC	OFF		root		
	panel					F '- 9
Sub-System	State					F1g.8
CSC_GAS	ON					
CSC_LV	OFF					
CSC_HV	OFF					
CSC_WTH	ON					
CSC_ME_P1	OFF	<u>a</u>				
CSC_ME_P2	ÖFF	8				
CSC_ME_P3	OFF	A				
CSC_ME_P4	ON	a				
Messages	8					
					Close	

Advanced Information:

1) During the operation if you have a trouble with FSM you may:

Click "Start/Restart All" as shown in fig.4 (to restart the FSM) and follow with figs.5-8

2) During the operation you also may

Click the "Lock" icon of the "CMS_CSC" node to display the "Modes" window like shown in fig.10



Click ">>" and then the "Release All" button Wait for the "Modes" window to disappear to get the display like shown in **fig 7.a** Then follow with **figs.7a - 8**

3) During the operation (when the CMS_CSC project is running) you may issue the command: emudcs_start

(please do that after the proper logon: see the top of the instruction)

The command closes the currently running CMS_CSC project and starts a new one.